

RS190

METER / INVERTER

INTRODUCTION

It can be very useful to know the voltage being produced by any module within the Integrator. This can help you to refine your patches, and to check that modules are repounding as you think they should.

IN USE

CV/Signal Input

The RS190 offers a single CV input that accepts and displays audio and CV signals in the ranges $\pm 5V$ and $0V$ to $+10V$.

CV/Signal Switch

You may use this to select between CVs (DC and very low frequency signals) and audio.

- CV

The meter responds to DC and slowly varying signals, thus allowing you to see the fluctuations in voltages created by devices such as envelope generators.

- Sig

The meter responds to, and displays the RMS value of AC signals. This means that it is optimised for measuring the amplitudes of audio signals.

- Off

The meter does not respond to incoming signals.

Outputs

The RS190 offers two outputs. These carry identical signals, except that the phase of one is inverted with respect to the other.

- Output +

This outputs a signal identical to that received at the CV/Sig Input.

- Output -

This outputs a signal that is inverted with respect to that received at the CV/Sig Input.

Adjustment Screw

To calibrate the RS190 you should disconnect any inputs and position the needle at $0V$ using the white nylon screw.

